




Photon® II Battery Replacement

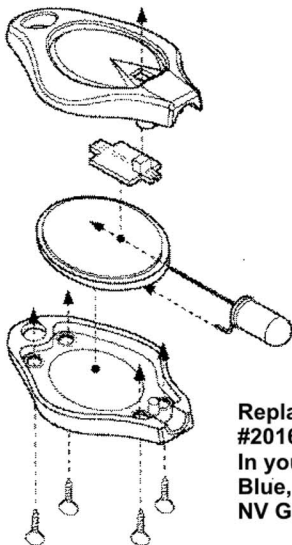

Turn Photon with screw side up, remove screws. Flip over so the switch is on the top. Remove top and switch, carefully hold LED in place. Remove Battery(s). Replace new Battery(s) with plus side down. Replace switch and top, snap shut. Flip back over and and replace screws.

Replace with Two
#2016 Batteries
In your White,
Blue, Purple,
NV Green, Green.

Replace with one
#2032 Battery
in your
Red, Yellow,
Orange, IR.

Operational Tips:

- The Switch will slide much easier when NOT squeezing at the same time.
- If light flickers, gently wipe leads with a soft tissue, being careful not to distort their shape.
- For a snappier switch; carefully raise the lead (wire) 25-30° and reassemble.

We Take Quality Seriously

If your Photon Micro-Light II fails for any reason other than abuse or battery expiration, return it for free repair or replacement to:

LRI • PO Box 58 • Blachly, OR 97412

PHOTON | **Light**.COM

200 W 38th Avenue • Eugene, Oregon 97405
P. 1.877.584.6898, 541.925.3149 F. 541.484.6898
www.photonlight.com