

IMPORTANT! Light will continue to automatically turn itself off when activated unless Demonstration Mode is disabled.
To disable— Press and hold until light turns off (in about 20 seconds).
Light is now ready to use.



Photon ReX™ Rechargeable Personal Flashlight Charger Use and Operation Guide

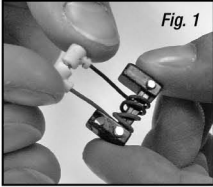


Fig. 1

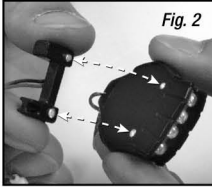


Fig. 2

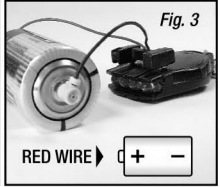


Fig. 3

Thank you for purchasing ReX, the awesome Rechargeable Micro Flashlight. Easy on the environment and easy on your wallet - Your Photon ReX is sure to light the way. Enjoy. *David Allen*

Using the Charger

1. Disengage magnetic charging contacts and unwind the wire leads from the charging unit. (See fig. 1). Note: Each specially designed, ultra-flexible wire lead contains 56 micro-strands of copper.

2. Attach the charging unit to the light button side down as shown in figure 2. Note: The charging unit uses special rare earth magnetic contacts. **Do not press or force them into place.** They will self-align.

3. Attach magnetic charging leads to battery power source. See figure 3. The **red (+)** wire attaches to the (+ bump) side of the battery. The **black (-)** wire attaches to the (- flat) side of the battery.

Note: When properly attached to a power source, light will begin blinking within a few seconds indicating the charging process has begun. Blinking will stop once your light is fully charged, indicating the charging process has finished.

5. Detach charging unit. Allow wire magnets to stick together. Carefully rewind leads around charging unit and wedge them back into place.

Hints and Comments

Charging unit may be removed any time during the charging process with no damage to the light, charger or battery source.

ReX uses state-of-the-art magnetic attachment technology. If you find a battery that is nonmagnetic simply use another battery.

ReX uses a rechargeable (Lithium Ion) battery with a life expectancy of approximately 300–500 charges.

IMPORTANT Recharge REX with any battery up to 3 volts max.

Single Button Operation Quick Reference Guide

1. Press Button for ON and OFF

2. To Control Brightness - From Off: Press and hold. Release at desired brightness. Light will "blink" at full brightness. From On: Press and hold. Release at desired dimness. Light will "blink" at lowest light level.

3. For Safety Beacons - Press and hold past "blink." You can choose Slow Beacon, Medium Beacon, Fast Flash or SOS.

4. Signal/Morse Code - Repeatedly press button. **To exit Signal/Morse Code** - Press button until light goes off.

For additional information visit our website at:
www.laughingrabbitinc.com

Please write us and tell us how you use your ReX light and accessories.



LRI - 20448 Hwy 36 Blachly, OR 97412
541-925-3741

Note: When the life of the sealed battery finally expires, you may return your ReX to LRI for recycling. Or, take advantage of our **Special Offer*** - Return the light with \$18.00 (USD) to LRI and we will send you a new ReX.

**Subject to change.*

©2007 LRI All Rights Reserved

PHOTON | Light.com

200 W 38th Avenue • Eugene, Oregon 97405
P. 1.877.584.6898, 541.925.3149 F. 541.484.6898
www.photonlight.com