

IMPORTANT!

Operating Instructions

X-Light[®] Micro

IMPORTANT!!

In order to have full use of your light, **YOU MUST** take the X-Light Micro out of Demonstration mode!

To Remove From Demonstration Mode: Press and hold button until light turns off. (about 20 seconds)

Single Button Operation

1. Press Button for On and Off



2. To Control Brightness

From Off- Press and hold, release at desired brightness. Light will "blink" at full brightness.

From On- Press and hold, release at desired dimness. Light will "blink" at lowest light level.

3. For safety Beacons- Press and hold past "blink" You can choose Slow Beacon, Medium Beacon, Fast flash, or S.O.S.

4. Signal/Morse Code (Squeeze only light) Press rapidly until light will not stay on. To exit Signal/ Morse Code, press until light turns off.

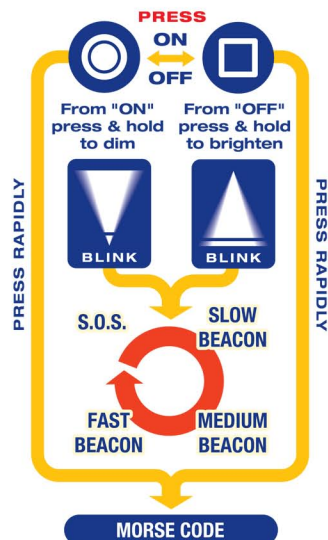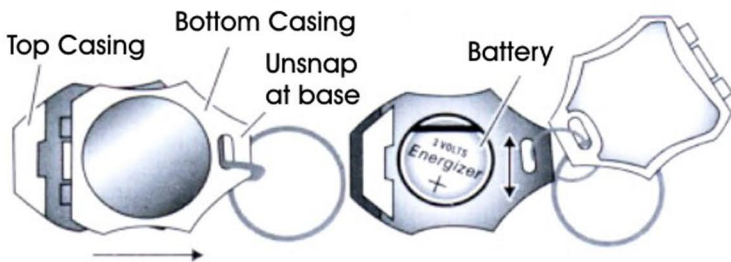

We Take Quality Seriously

If your Photon X-Light Micro fails for any reason other than abuse or battery expiration, return it for free repair or replacement.

LRI • PO Box 58 • Blachly, OR 97412

Caution: Potential Choking Hazard to children.

PHOTON Light.com

200 W 38th Avenue • Eugene, Oregon 97405
P. 1.877.584.6898, 541.925.3149 F. 541.484.6898
www.photonlight.com